

# MIXX<sup>®</sup>

VINYL RECORD PLAYER



# Tribute

QUICK START GUIDE



## THANKS!

Thanks for choosing our MIXX Tribute Vinyl Record Player.

All of our products come with a 2 year warranty for peace of mind.


Feedback is welcome, email us on [support@mixx-io.com](mailto:support@mixx-io.com) for any comments or queries.



## CONTENTS

THE TURNTABLE	1
WHAT'S IN THE BOX?	2
LET'S GET STARTED	2
LET'S PLAY	3
LET'S CONNECT	4
MAINTENANCE	6
LET'S BE SAFE	7

# THE TURNTABLE

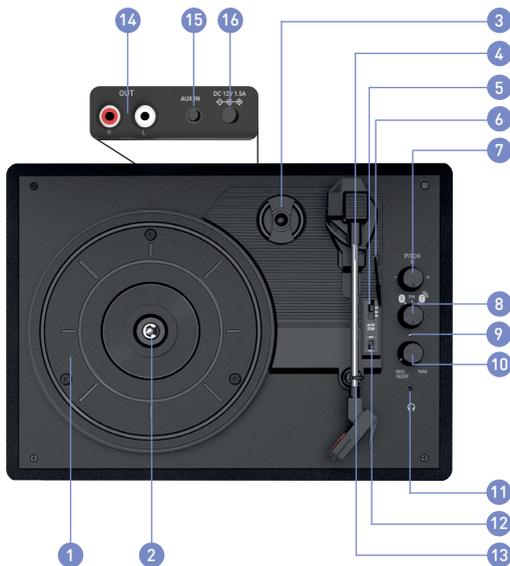

- 1 Turntable Platter
- 2 Turntable Spindle
- 3 45 RPM Adapter
- 4 Tonearm
- 5 Speed Switch
- 6 Tonearm Lever
- 7 Pitch Control Knob
- 8 Function Switch

- 9 Function Indicator
- 10 On/Off Volume Knob
- 11 Headphone Jack
- 12 Auto-Stop Switch
- 13 Hold Down Clip
- 14 RCA Jacks
- 15 Aux In Jack
- 16 Power Jack

# WHAT'S IN THE BOX?

Before you throw away any of the packaging, please take a moment to carefully check and ensure that all of the following items are in the box:



Turntable



45 RPM  
Adapter



AC Power  
Adapter

If you find that any of these accessories are missing, please reach out to Mixx customer service for further assistance.

**Please hold on to the original packaging materials in case you need to exchange or return any items later on.**

# LET'S GET STARTED

**Find a flat and level surface** to place the unit on. It's important to choose a stable location that is free from vibrations.

**Remove the tie-wrap** that secures the tonearm **4**.

**Connect the AC adaptor** to the Power Jack **16** of the unit. Note: It's crucial not to plug the AC power adaptor into the power outlet until you've completed all the assembly steps. Before powering on, double-check that all the connections are set up correctly. Remember to always turn off the power when connecting or disconnecting any components.

# LET'S PLAY

1. **Rotate** the On/Off Volume Knob **10** to turn on the power.

2. **Set the Function Switch** **8** to the PH position.

Note: The Function Indicator **9** will be RED.

3. **Set the Speed Switch** **5** to the appropriate speed for the record you are playing. (e.g., 33 RPM, 45 RPM, or 78 RPM).

4. **Place the record** on the turntable. Use the 45 RPM Adapter **3** if necessary to accommodate records with larger center holes.

5. **Remove the stylus protector** from the stylus assembly.

Note: Make sure to keep the included stylus guard in place whenever the turntable is moved or cleaned to avoid damaging the stylus.

6. **Release the tonearm Hold Down Clip** **13**. This clip holds the tonearm **4** in place when the turntable is not in use. Remember to lock it back when the turntable is not in use.

7. **Use the Tonearm Lever** **6** to lift up the tonearm **4** gently.

8. **Carefully move the tonearm** **4** over the record to the desired starting position for playback.

**Set the Tonearm Lever** **6** back to the down position, and the tonearm **4** will slowly descend onto the record and begin playback.

9. When the record is finished playing, **use the Tonearm Lever** **6** again to raise the tonearm **4**.

**Return the tonearm** **4** to the Tonearm Rest.

**Release the lever** **6** to let the tonearm **4** sit back at its rest. If you want to suspend playback temporarily, repeat these steps.

10. **Lock the Tonearm Hold Down Clip** **13** to secure the tonearm **4** in place for storage.

Note: If the **Auto-Stop Switch** **12** is set to the ON position, the platter will automatically stop after playback. This feature applies to most 33RPM vinyl records. On occasion, the turntable may stop before the end of the record. Set the Auto-Stop Switch **12** to OFF to overcome this.

You can also adjust the speed of your record by turning the **Pitch Control Knob** **7** clockwise to increase it or anti-clockwise to decrease it by approximately 10%.

# LET'S CONNECT

## Connecting to a Stereo System:

**Connect the RCA Jacks** **14** directly to active/powered speakers or the appropriate input of your audio system to output analogue line-level signals. Ensure the RED plug is in the RIGHT channel, and the WHITE plug is in the LEFT channel.

Note: The RCA Jacks **14** are not intended for use with passive speakers; connecting them will result in significantly reduced volume.

## Connecting via Aux:

### Input

**Connect to the Aux In Jack** **15** using a 3.5mm auxiliary cable to play music through the turntable speakers from another audio device.

### Output

**Connect to the Headphone Jack** **11** using a 3.5mm auxiliary cable to listen to the turntable with wired headphones.

Note: The built-in speaker will stop playing once wired headphones are plugged in.

## Connecting via Bluetooth:

### Input

You can play music from your smartphone or other audio device.

**Set the Function Switch** 8 to R ; this will cause the Function Indicator 9 to flash BLUE.

When your device is in pairing mode, the turntable will appear on your audio device as "MIXX Tribute".

Once paired successfully, the Function Indicator 14 will turn off.

You can now play music from your device through the turntable; you can adjust the volume using the On/Off Volume Knob 10 .

To disconnect your device, turn the Function Switch away from R .

Note: Position your audio device as close as possible to the turntable when pairing.

### Output

You can transmit the audio from your records to your Bluetooth headphones or speakers.

**Set the Function Switch** 8 to T ; this will cause the Function Indicator 9 to flash BLUE.

Once both your device and the turntable are in pairing mode, they will connect automatically and the Function Indicator 14 will turn off.

To disconnect your device, turn the Function Switch away from T .

# MAINTENANCE

## Routine Maintenance

**Avoid touching** the stylus tip with your fingers and clean the stylus regularly with a soft brush using back-and-forth motions.


**Regularly clean** the records with a record cleaning brush and record cleaning solution.

**Clean the turntable lid and turntable cabinet** with a slightly damp microfiber cloth.

**IMPORTANT!** Do NOT use a cleanser that contains alcohol, benzene or any other harsh chemicals that might damage the turntable.

## Replacing your Needles

### Removing the Needle

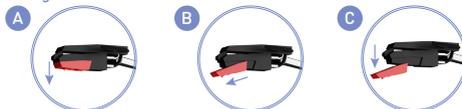

1. Place a screwdriver at the tip of the stylus and push downward A .
2. Remove the stylus by pulling it forward B and pushing downward C .

### Installing the Needle



1. Hold the tip of the stylus and insert the stylus by pushing downward D .
2. Push the stylus upward E until the stylus locks into the tip position F .

## Storing your Turntable

Before storage, ensure that the tonearm is locked using the latch on the tonearm rest.

Remember to store in a cool, dry location and keep all accessories with the turntable.

Do not stack anything on top of the turntable.

# LET'S BE SAFE

## IT IS IMPORTANT THAT YOU PLEASE READ THIS SECTION COMPLETELY.

Ensure the product is correctly connected using the manufacturer's original accessories included with the product. Only use attachments recommended by the product manufacturer to avoid potential hazards.

Do NOT make unauthorized alterations to this product.

Take care to protect the power cord from being walked on or pinched, especially at the plugs, convenience receptacles, and where it exits from the product.

Avoid overloading wall outlets, extension cords, or integral convenience receptacles, as this can create a fire hazard or risk of electric shock.

During lightning storms or when the product remains unused for extended periods, it is advisable to unplug the product for safety reasons.

Never insert any objects into the product through openings, as they may come into contact with dangerous voltage points or cause short-circuits that could result in fire or electric shock. Additionally, avoid spilling any liquids on the product.

The cabinet features slots and openings for ventilation purposes

to ensure reliable operation and prevent overheating of the product. Please avoid blocking or covering these openings.

For your safety, refrain from attempting to service this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. It is advised to seek assistance from qualified service personnel for any servicing needs.

Product may contain small parts which can be a choking hazard. Please keep the product out of reach from children under 6 and animals.

If your product has become damaged in any way, does not operate normally or has been dropped, please refer to a qualified person to have the product checked before continuing to use it.

The operating temperature range for this product is 5° - 40° celsius.

Please avoid exposing the product to moisture, liquid spills or splashing.

If you experience any of the issues listed above, please turn off your device and contact MIXX Ltd on [support@mixx-io.com](mailto:support@mixx-io.com).

# MIXX



[support@mixx-io.com](mailto:support@mixx-io.com)



[mixxaudio.com](https://www.mixxaudio.com)

### MIXX Limited

5 The Pavilions, Brighton Road, Pease Pottage,  
West Sussex, RH11 9BJ. United Kingdom